

# HI-204III

**Ultra High Sensitive  
Mini-DIN  
GPS Receiver**


# GPS



**USER Manual**





**HAiCOM**™  
GPS

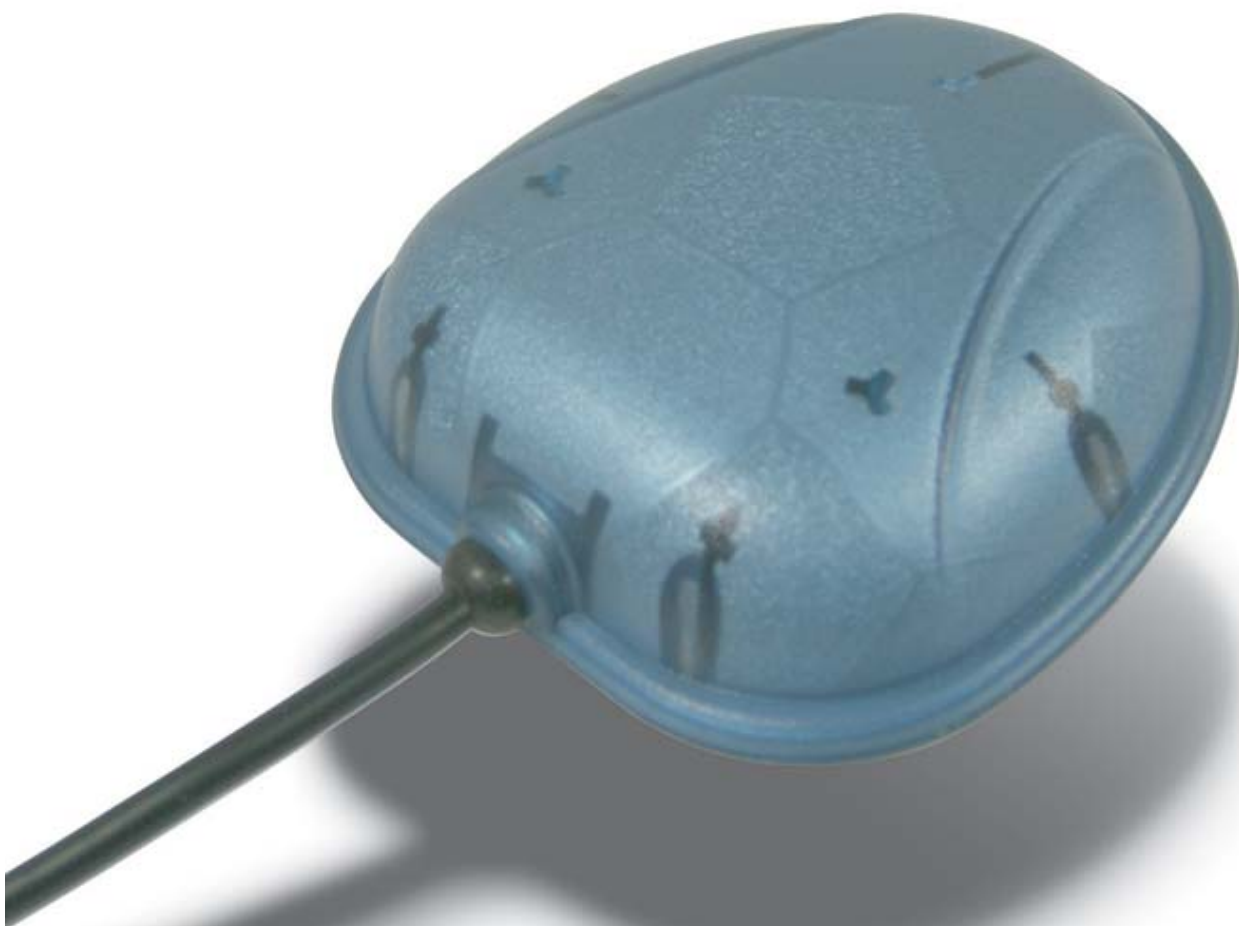



**HI-204III**  
**WATERPROOF**  
**Ultra High Sensitive**  
**GPS Receiver**

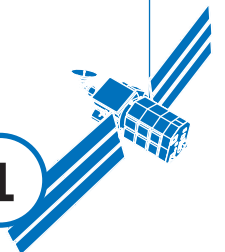

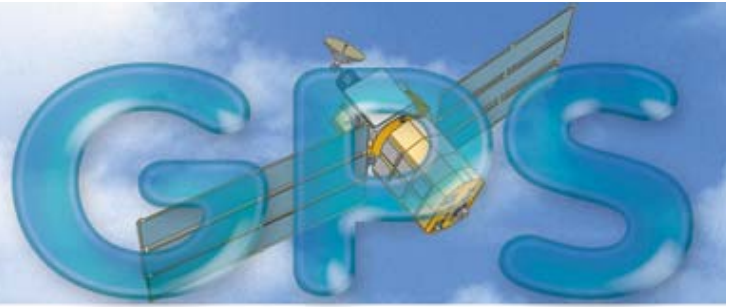

## General description of what GPS is and how it works.


GPS (Global Positioning System) is the only system today able to show you your exact position on the Earth anytime, in any weather, anywhere. GPS satellites, 24 in all, orbit at 11,000 nautical miles above the Earth. They are continuously monitored by ground stations located worldwide. The satellites transmit signals that can be detected by anyone with a GPS receiver. Using the receiver, you can determine your location with great precision.

The satellites are positioned so that we can receive signals from six of them nearly 100 percent of the time at any point on Earth. You need that many signals to get the best position information. Satellites are equipped with very precise clocks that keep accurate time to within three nanoseconds- that's 0.000000003, or three billionths of a second. This precision timing is important because the receiver must determine exactly how long it takes for signals to travel from each GPS satellite. The receiver uses this information to calculate its position.



Although GPS was designed for military use, many thousands of civilians make use of it. The satellites actually broadcast two signals, one is only for military use, and the other can be used by both military and civilians. Since GPS is passive (you only need to receive the signal), there are no restrictions on who can use the signal available to civilians.



GPS technology can be used in a variety of fields besides providing navigation for vehicles on the sea, in the air and on the ground. GPS applications also include keeping track of where a fleet of trucks, trains, ships or planes are and how fast they are moving; directing emergency vehicles to the scene of an accident; mapping where a city's assets are located ; and providing precise timing for endeavors that require large-scale coordination.

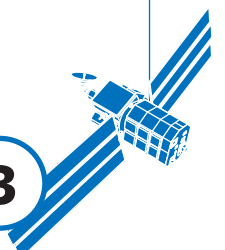

## GLOBAL POSITIONING SYSTEM HI-204III GPS RECEIVER

### Pin Assignment

#### Connectors

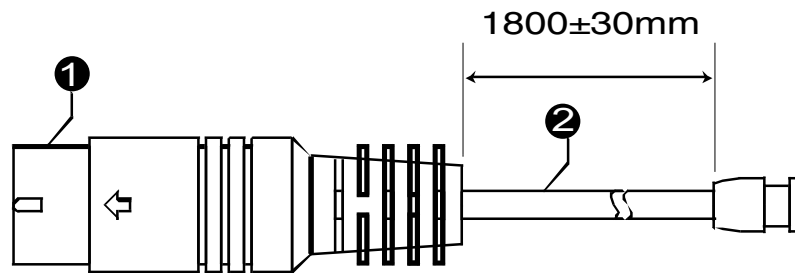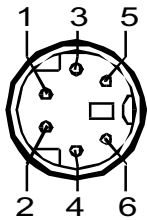

#### PS/2 Connector

Color	Function	CN1
Green	TX	5
White	RX	4
Red	VCC	2
Black	GND	1

① Mini Din: 6 pin male connector

② Wire:  $3.6 \pm 0.1\text{mm}$






## Pocket PC

HI-204III PS/II GPS receiver Can Connecting to a female PS/II Connector. One end from the female Connector is +12V car charger (charging PDA and GPS receiver simultaneously) the other end form the female PS/II connector is the PDA connector for connecting your PDA.



**For notebook PC use:**  
HI-204III PS/II can also connect with a PS/II to DB9 PS-232 serial cable or USB connector.

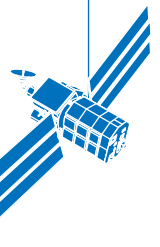

## 1. HI-204III Series Introductions

HI-204III is a GPS receiver with PS/II mini-DIN interfaces and built-in active antenna for high sensitivity to tracking signal. HI-204III is well suited to system integration and users who use any kinds of mobile devices, such as, PDA, notebook PC, Tablet PC, etc. It satisfies a wide variety of applications for car navigation, personal navigation or touring devices, tracking and marine navigation purpose. Users can simply plug it into a PDA or other type of handheld PC running with suitable mapping and routing software for navigation.

### 1.1 Standard Package

Before you start up, make sure that your package includes the following items. If any items are missing or damaged, contact your dealer immediately.

- HI-204III GPS Receiver unit
- Suction CUP
- User Manual CD  
(including User Manual, HaiTest Testing Program)



**Optional Accessories:**


- PS/II to PDA connector and car charger
- PS/II to DB9 adapting cable
- PS/II to USB adapting cable



HI-204III-XXXX  
(Pocket PC Plug)

HI-204III-DB9

HI-204III-USB

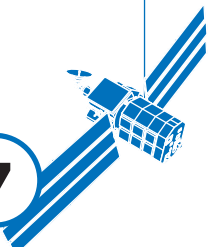

## SECTION 1 INTRODUCTION

### 1.1 OVERVIEW

Fast Acquisition Enhanced Sensitivity

20 Channels “All-In-View” Tracking GPS Sensor Module

The receiver continuously tracks all satellites in view and provides accurate satellite positioning data. The HI-204III is optimized for applications requiring good performance, low cost, and maximum flexibility; suitable for a wide range of OEM configurations including handhelds, sensors, asset tracking, PDA-centric personal navigation system, and vehicle navigation products.

Its 20 parallel channels and 4000 search bins provide fast satellite signal acquisition and short startup time. Tracking sensitivity of  $-159\text{dBm}$  offers good navigation performance even in urban canyons having limited sky view.




Satellite-based augmentation systems, such as WAAS and EGNOS, are supported to yield improved accuracy.

Both the LVTTL-level and RS232-level serial interface are provided on the interface connector. Supply voltage of 3.3V, or 3.8V~12V are supported.

## 1.2 Features

- 20 parallel channel GPS receiver
- 4000 simultaneous time-frequency search bins
- SBAS (WAAS, EGNOS) support
- -159dBm tracking sensitivity
- < 8 second hot start
- < 40 second cold start

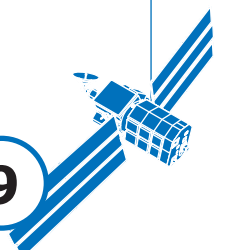

## SECTION 2

### RECEIVER OPERATION

Upon power up, after initial self-test has completed, the HI-204III will begin satellite acquisition and tracking process. Under normal open-sky condition, position-fix can be achieved within approximately 35 seconds (within 10 seconds if valid ephemeris data is already collected from recent use). After receiver position has been calculated, valid position, velocity and time information are transmitted through the on board serial interface.

The receiver uses the latest stored position, satellite data, and current RTC time to achieve rapid GPS signal acquisition and fast TTFF. If the receiver is transported over a large distance across the globe, cold-start automatic-locate sequence is invoked. The first position fix may take up to 50 sec searching the sky for the GPS signal. The acquisition performance can be improved significantly if the host initializes the receiver with a rough estimate of time and user position.




As soon as GPS signal is acquired and tracked, the HI-204III will transmit valid navigation information through its serial interface. The navigation data contains following information:

- Receiver position in latitude, longitude, and altitude
- Receiver velocity
- Time
- DOP error-magnification factor
- GPS signal tracking status

The HI-204III will perform 3D navigation when four or more satellites are tracked. When three or fewer satellites are tracked, altitude-hold is enabled using the last computed altitude and 2D navigation mode is entered.

With signal blockage or rising and setting of the satellites, where a change in satellite constellation used for position fix occurred, large position error may result. The HI-204III incorporates a proprietary algorithm to compensate the effect of satellite constellation change, and maintains an accurate smooth estimate of the receiver position, velocity, and heading.

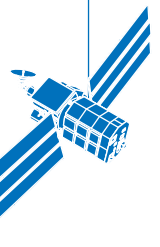

## 2. Technical Specifications

### 2.1. Electrical Characteristics

	Items	Description
<b>Chipset</b>	GSP3F	SiRF StarIII technology
<b>General</b>	Frequency	L1, 1575.42 MHz
	C/A code	1.023 MHz chip rate
	Channels	20
<b>Accuracy</b>	Position	10 meters, 2D RMS
		5 meters 2D RMS, WAAS corrected
		<5meters(50%), DGPS corrected
	Velocity	0.1 meters/second
	Time	1 microsecond synchronized to GPS time
<b>Datum</b>	Default	WGS-84
	Other	selectable for other Datum
<b>Acquisition Rate (Open Sky &amp; Stationary Requirements)</b>	Reacquisition	0.1 sec., average
	Snap start	1 sec., average
	Hot start	8 sec., average
	Warm start	38 sec., average
	Cold start	42 sec., average
<b>Dynamic Conditions</b>	Altitude	18,000 meters (60,000 feet) max.
	Velocity	515 meters/second (1000 knots) max.
	Acceleration	4g, max.
	Jerk	20 meters/second <sup>3</sup> , max.
<b>Power</b>	Main power input	5V DC input.
	Power consumption	0.38 W (continuous mode)
	Supply Current	75mA
	Backup power	3 V Lithium-Ion rechargeable battery
<b>Dimension</b>	43mm L x 42mm W x 13mm H	
<b>Weight</b>	23g	

### 2.2 LED INDICATOR

LED flashing 0.25Hz	Signal Searching
LED flashing 1Hz	Position Fixed




## SECTION 3 HARDWARE INTERFACE

### 3.1 MECHANICAL DIMENSIONS

Unit:mm



**Top View**

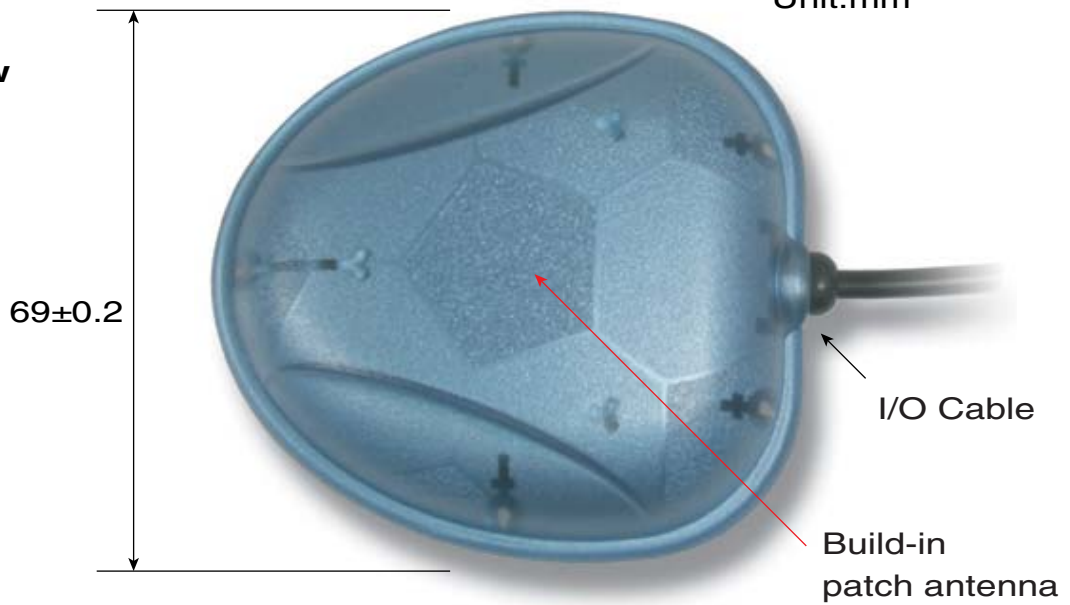

**Lateral View**



**Bottom View**

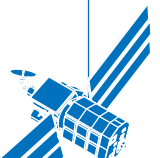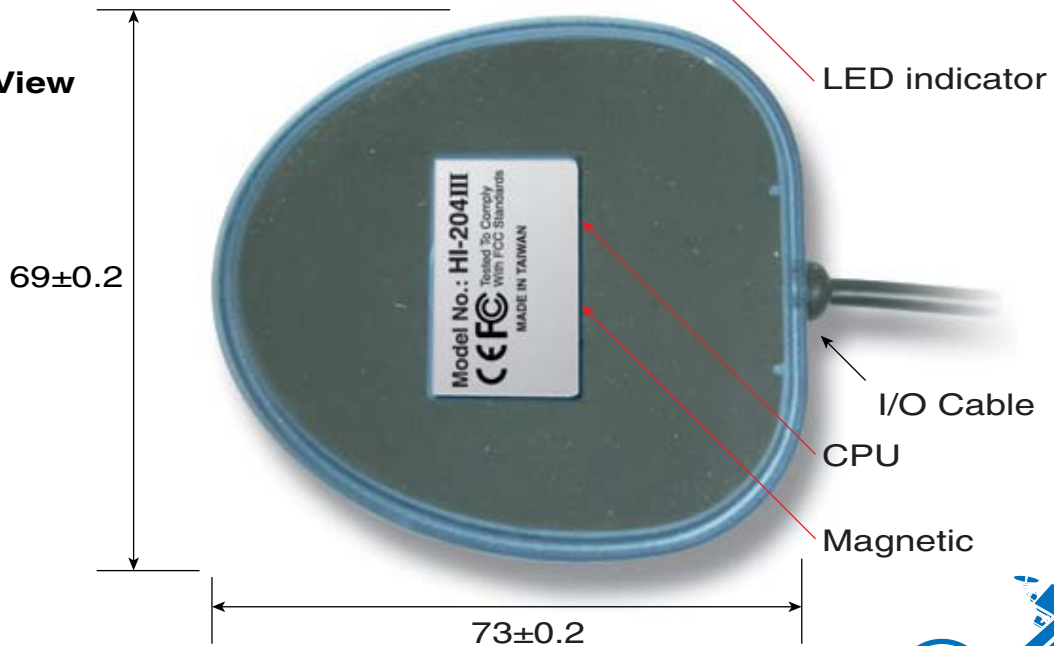

### 3.2 ONE-PULSE-PER-SECOND (1PPS) OUTPUT


The one-pulse-per-second output is provided for applications requiring precise timing measurements. The output pulse is 1usec in duration. Rising edge of the output pulse is accurate to +/-1usec with respect to the start of each GPS second. Accuracy of the one-pulse-per-second output is maintained only when the GPS receiver has valid position fix.

The 1PPS output is always generated when the GPS receiver is powered-on. Proper adjustment of the 1PPS output to align with the GPS second requires calculation of the receiver clock offset and clock drift-rate as part of the position-velocity-time (PVT) solution. When enough satellite signals are received to generate valid position fixes, the 1PPS output is adjusted to align with the GPS second in several seconds. When the 1PPS output is brought in sync with the GPS second, the 1PPS Valid Signal on the I/O pin becomes active (HIGH); when the 1PPS output is not yet in sync with the GPS second, the 1PPS Valid Signal remains inactive (LOW).



As long as enough satellite signals are received to generate valid position fixes, the 1PPS output remains synchronized to the GPS second, and the 1PPS Valid Signal remains active. If signal blockage prevents the receiver from generating valid position fix, the 1PPS output will drift away from the GPS second and the 1PPS Valid Signal will become inactive. Upon re-acquiring enough satellites to generate consecutive valid position fixes, the 1PPS Valid Signal will become active again, signaling that the 1PPS output is again synchronized with the GPS second.

For best stable operation of the 1PPS signal, it is to be operated in static environment having clear view of the sky.

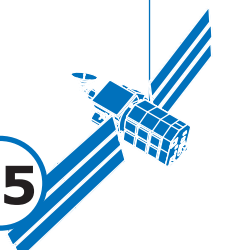

## SECTION 4


### SOFTWARE INTERFACE

This section describes the details of the serial port commands through which the HI-204III is controlled and monitored. The serial port commands allow users to set the receiver parameters, configure output message type, and retrieve status information. The baud rate and protocol of the host COM port must match the baud rate and protocol of the GPS receiver serial port for commands and data to be successfully transmitted and received. The default receiver protocol is 4800 bps, 8 data bits, 1 stop bit, and none parity.

#### 4.1 NMEA OUTPUT MESSAGE SPECIFICATION

The HI-204III supports NMEA-0183 output format as defined by the National Marine Electronics Association (<http://www.nmea.org>). The currently supported NMEA messages for GPS applications are:

- GGA** Global Positioning System Fix Data
- GLL** Geographic Position Latitude / Longitude
- GSA** GNSS DOP and Active Satellites
- GSV** GNSS Satellites in View
- RMC** Recommended Minimum Specific GNSS Data
- VTG** Course Over Ground and Ground Speed

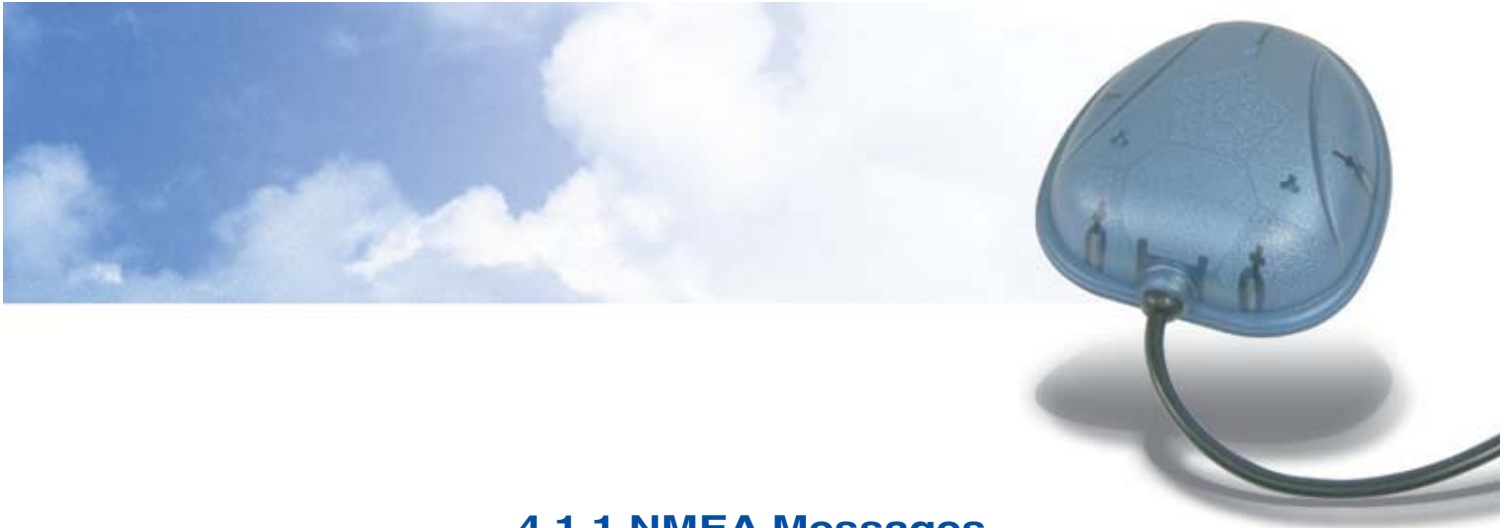

### 4.1.1 NMEA Messages

The serial interface protocol is based on the National Marine Electronics Association's NMEA 0183 ASCII interface specification. This standard is fully define in "NMEA 0183, Version 3.01" The standard may be obtained from NMEA, [www.nmea.org](http://www.nmea.org)

### 4.1.2 GGA - GPS FIX DATA


Time, position and position-fix related data (number of satellites in use, HDOP, etc.).

**Format:**

\$GPGGA,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,  
M,<10>,M,<11>,<12>,\*<13><CR><LF>

**Example:**

\$GPGGA,104549.04,2447.2038,N,12100.4990,E,1,06,  
01.7,00078.8,M,0016.3,M,,\*5C<CR><LF>

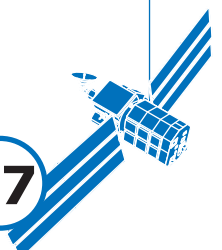

Field	Example	Description
1	104549.04	UTC time in hhmmss.ss format, 000000.00 ~ 235959.99
2	2447.2038	Latitude in ddmm.mmmm format Leading zeros transmitted
3	N	Latitude hemisphere indicator, 'N' = North, 'S' = South
4	12100.4990	Longitude in dddmm.mmmm format Leading zeros transmitted
5	E	Longitude hemisphere indicator, 'E' = East, 'W' = West
6	1	Position fix quality indicator 0: position fix unavailable 1: valid position fix, SPS mode 2: valid position fix, differential GPS mode
7	06	Number of satellites in use, 00 ~ 12
8	01.7	Horizontal dilution of precision, 00.0 ~ 99.9
9	00078.8	Antenna height above/below mean sea level, -9999.9 ~ 17999.9
10	0016.3	Geoidal height, -999.9 ~ 9999.9
11		Age of DGPS data since last valid RTCM transmission in xxx format (seconds) NULL when DGPS not used
12		Differential reference station ID, 0000 ~ 1023 NULL when DGPS not used
13	5C	Checksum

**Note:** The checksum field starts with a '\*' and consists of 2 characters representing a hex number. The checksum is the exclusive OR of all characters between '\$' and '\*'.



### 4.1.3 GLL - LATITUDE AND LONGITUDE, WITH TIME OF POSITION FIX AND STATUS

Latitude and longitude of current position, time, and status.

**Format:**

\$GPGLL,<1>,<2>,<3>,<4>,<5>,<6>,<7>\*<8><CR><LF>

**Example:**

\$GPGLL,2447.2073,N,12100.5022,E,104548.04,A,A\*65<CR><LF>

Field	Example	Description
1	2447.2073	Latitude in ddmm.mmmm format Leading zeros transmitted
2	N	Latitude hemisphere indicator, 'N' = North, 'S' = South
3	12100.5022	Longitude in dddmm.mmmm format Leading zeros transmitted
4	E	Longitude hemisphere indicator, 'E' = East, 'W' = West
5	104548.04	UTC time in hhmmss.ss format, 000000.00 ~ 235959.99
6	A	Status, 'A' = valid position, 'V' = navigation receiver warning
7	A	Mode indicator 'N' = Data invalid      'D' = Differential 'A' = Autonomous      'E' = Estimated
8	65	Checksum



#### 4.1.4 GSA - GPS DOP AND ACTIVE SATELLITES

GPS receiver operating mode, satellites used for navigation, and DOP values.

**Format:**

```
$GPGSA,<1>,<2>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<4>,<5>,<6>*<7><CR><LF>
```

**Example:**

```
$GPGSA,A,3,26,21,,,09,17,,,,,,10.8,02.1,10.6*07<CR><LF>
```

Field	Example	Description
1	A	Mode, 'M' = Manual, 'A' = Automatic
2	3	Fix type, 1 = not available, 2 = 2D fix, 3 = 3D fix
3	26,21,,,09,17,,,,,	PRN number, 01 to 32, of satellite used in solution, up to 12 transmitted
4	10.8	Position dilution of precision, 00.0 to 99.9
5	02.1	Horizontal dilution of precision, 00.0 to 99.9
6	10.6	Vertical dilution of precision, 00.0 to 99.9
7	07	Checksum



### 4.1.5 GSV - GPS SATELLITE IN VIEW

Number of satellites in view, PRN number, elevation angle, azimuth angle, and C/No. Only up to four satellite details are transmitted per message. Additional satellite in view information is sent in subsequent GSV messages.


#### Format:

```
$GPGSV,<1>,<2>,<3>,<4>,<5>,<6>,<7>, ... ,  
<4>,<5>,<6>,<7> * <8><CR><LF>
```

#### Example:

```
$GPGSV,2,1,08,26,50,016,40,09,50,173,39,21,43,316,  
38,17,41,144,42*7C<CR><LF>  
$GPGSV,2,2,08,29,38,029,37,10,27,082,32,18,22,309,  
24,24,09,145,*7B<CR><LF>
```

Field	Example	Description
1	2	Total number of GSV messages to be transmitted
2	1	Number of current GSV message
3	08	Total number of satellites in view, 00 ~ 12
4	26	Satellite PRN number, GPS: 01 ~ 32, SBAS: 33 ~ 64 (33 = PRN120)
5	50	Satellite elevation number, 00 ~ 90 degrees
6	016	Satellite azimuth angle, 000 ~ 359 degrees
7	40	C/No, 00 ~ 99 dBNull when not tracking
8	7C	Checksum

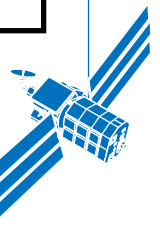

#### 4.1.6 RMC - RECOMMENDED MINIMUM SPECIFIC GPS/TRANSIT DATA

Time, date, position, course and speed data.

**Format:**

```
$GPRMC,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,<10>,<11>,<12>*<13><CR><LF>
```

**Example:**

```
$GPRMC,104549.04,A,2447.2038,N,12100.4990,E,016.0,221.0,250304,003.3,W,A*22<CR><LF>
```

Field	Example	Description
1	104549.04	UTC time in hhmmss.ss format, 000000.00 ~ 235959.99
2	A	Status, 'V' = navigation receiver warning, 'A' = valid position
3	2447.2038	Latitude in dddmm.mmmm format Leading zeros transmitted
4	N	Latitude hemisphere indicator, 'N' = North, 'S' = South
5	12100.4990	Longitude in dddmm.mmmm format Leading zeros transmitted
6	E	Longitude hemisphere indicator, 'E' = East, 'W' = West
7	016.0	Speed over ground, 000.0 ~ 999.9 knots
8	221.0	Course over ground, 000.0 ~ 359.9 degrees
9	250304	UTC date of position fix, ddmmyy format
10	003.3	Magnetic variation, 000.0 ~ 180.0 degrees
11	W	Magnetic variation direction, 'E' = East, 'W' = West
12	A	Mode indicator 'N' = Data invalid      'D' = Differential 'A' = Autonomous      'E' = Estimated
13	22	Checksum

## 4.1.7 VTG - COURSE OVER GROUND AND GROUND SPEED

Velocity is given as course over ground (COG) and speed over ground (SOG).


**Format:**

GPVTG,<1>,T,<2>,M,<3>,N,<4>,K,<5>\*<6><CR><LF>

**Example:**

\$GPVTG,221.0,T,224.3,M,016.0,N,0029.6,K,A\*1F<CR><LF>

Field	Example	Description
1	221.0	True course over ground, 000.0 ~ 359.9 degrees
2	224.3	Magnetic course over ground, 000.0 ~ 359.9 degrees
3	016.0	Speed over ground, 000.0 ~ 999.9 knots
4	0029.6	Speed over ground, 0000.0 ~ 1800.0 kilometers per hour
5	A	Mode indicator 'N' = Data invalid 'A' = Autonomous 'D' = Differential 'E' = Estimated
6	1F	Checksum

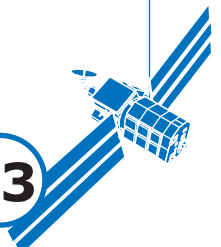

## APPENDIX B DEFAULT VALUES


The product has the following factory preset default values:

 

Datum:	000 (WGS-84)
NMEA Enable Switch:	GGA ON ( 1 sec. output) GLL OFF GSA ON ( 5 sec. output) GSV ON ( 5 sec. output) RMC ON ( 1 sec. output) VTG ON ( 1 sec. output) Checksum ON
Baud Rate:	4800 Baud
Elevation Mask:	5 degrees
DOP Mask:	DOP Select: Auto GDOP: 10 PDOP: 10 HDOP: 10
Receiver Operating Mode:	Normal Mode (without 1PPS)


 
Commands can be issued to the HI-204III to change the settings of the receiver. The new settings will remain effective on next power-on as long as the on-board rechargeable backup battery is not discharged. After the backup battery is discharged, factory preset default settings will be used.

 

## TROUBLESHOOTING


 
Problem	Reasons	Solutions
No Position output but timer is counting	Weak or no GPS signal can be received at the place of HI-204III unit	Place the HI-204III under an open space, then, press 'Reset'
	At outdoor space but GPS signal is blocked by building or car roof	To try again, go to outdoor and press 'Reset' or connect external antenna on the side of HI-204III to improve the poor GPS signal
Execute Fail	Wrong CPU type	PocketPC support multiple types of CPU. Make sure you download the correct testing (or mapping software). You can use the PDA smart menu's 'setting' function to see whether the CPU type is correct or not.
Can't open COM port	The PS/II connector did not insert correctly or some other application is the COM port	Plug HI-204III connector firmly or close all other application that occupied the COM port
Can not find HI-204III	Poor connection	Check HI-204III if Plug firmly
No signal	No action for few minutes may cause PocketPC into the power saving mode. It could close the COM port at the same time.	Close all applications and execute it again to re-open the COM port
	Weak or no GPS signal when using HI-204III indoor or inside the car.	Put HI-204III to an open space or car roof, then, press the Reset button

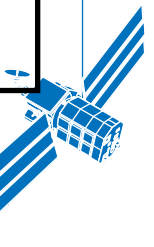


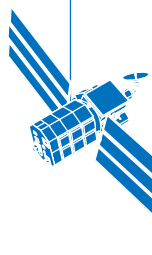

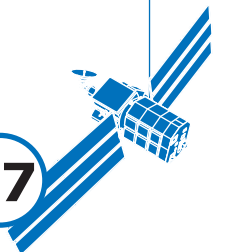

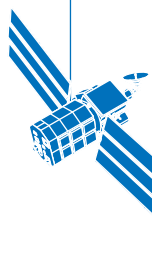

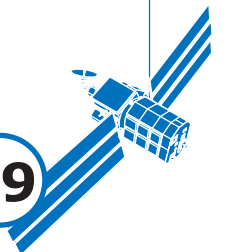

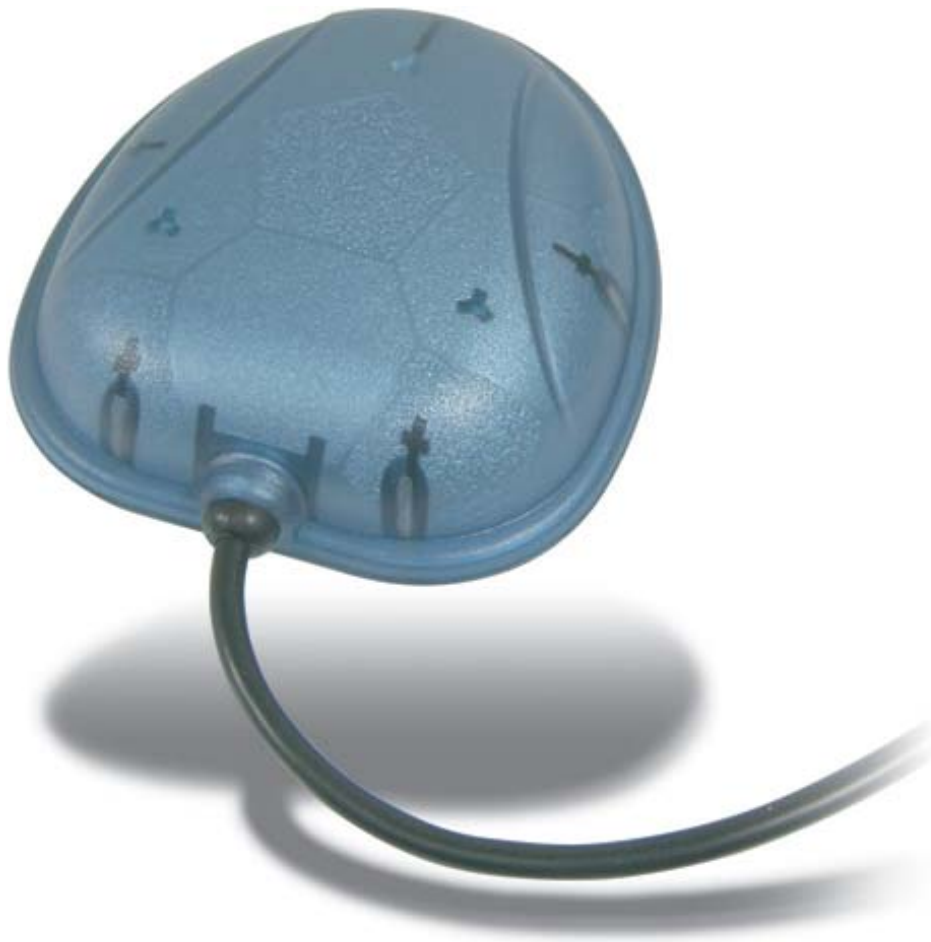

**WATERPROOF**  
**GPS Receiver**

